

 
Quick Installation Guide

ASTROS

Wireless Presentation Solution

For User

Start sharing your screen with ASTROS App

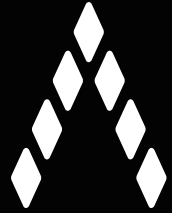

Download



Windows / macOS

Go to Astrogate.app website to download the ASTROS App for your device.



iOS / Android

Search for **ASTROS App** in App Store or Google Play.

Connect

- 1 Launch the **ASTROS App**.
- 2 On the **Station list**, find the “**Station name**” shown on the **Standby Screen**.
- ⓘ If the name does not appear on the **Station list**, switch your **Wi-Fi** to the network with the same name (**SSID**) as the **Station name**.
- 3 Click the **toggle** to connect to the right **Station**.

Present

 
MeetingRoom-01

Login code

□ □ □ □

Cancel Ok

Type in the login code.

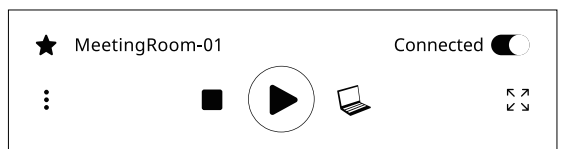


Click play button to start screen sharing.

Thank you for choosing Astrogate product.
For product support, please contact our partner or e-mail to
service@astrogate.com

For Installer

 Install and configure your ASTROS Station

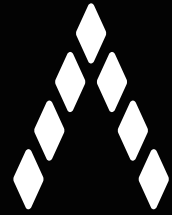

Package contents

ASTROS Station × 1

Antenna × 2

Quick Installation Guide × 1

Power adapter (12V 2A) × 1

ASTROS Station overview

- 1 Power button* 2 USB Type-C 3 USB 3.0 Type-A

 
 
*Power button function

Enter / quit Sleep or Suspend mode : short press for 1 second
Factory reset : long press until "Restarting..." dialog appears on screen

*Power button LED behavior

Red: sleep mode **Blue**: power on **Blinking red and blue**: firmware updating


- 4 Antenna connectors 5 Audio out 6 HDMI 1.4 out
7 USB 2.0 Type-A 8 VGA out
9 Ethernet port 10/100/1000 with PoE 10 Power port

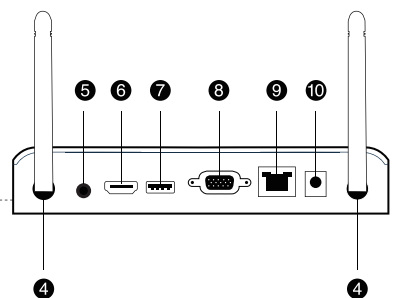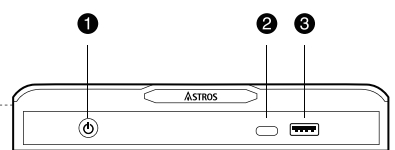

Installation guide

Wall mounting

 - 1 Drill two holes in the wall with the distance of 140 mm.
Use screw anchors if needed.

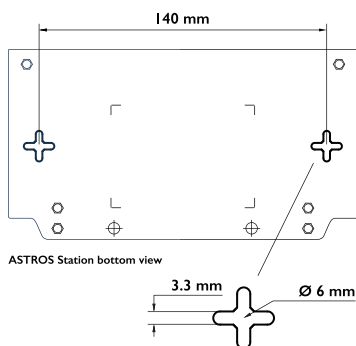

- 2 Drive in two screws.
The screw head size must be between 3.3 and 6 mm.
The screw rod diameter must be smaller than 3.3 mm.
Do not drive in the screws completely.
- 3 Hang the ASTROS Station to both screw heads and slide downwards until it is fixed.

- 1 Connect to a display with a HDMI or VGA cable.

If the display supports touch, also connect a USB cable.

- 2 Connect the Ethernet cable.

 
- 3 Connect a mouse.
Optional

- 4 Connect the power adapter.

ASTROS Station will automatically turn on without pressing the power button.

Connect cables

- 1 Make sure your laptop and ASTROS Station are on the same network.



- 2 Type in **https:// + Station IP** in a web browser.

Station IP can be found on the information panel of the Standby Screen.

example <https://192.168.120.11>

- 1 "https://" in URL is necessary for the browser to direct to the ASTROS configuration page correctly.

- 3 Type in configuration page password.

The password is **admin** by default.

- 1 For security purpose, please change the default password of your Station.

Access ASTROS configuration page

For in depth configuration information, please visit:
astrogate.com/download/astros/user_manual.pdf